
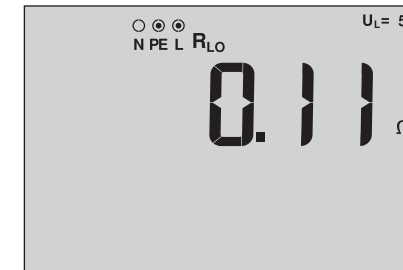
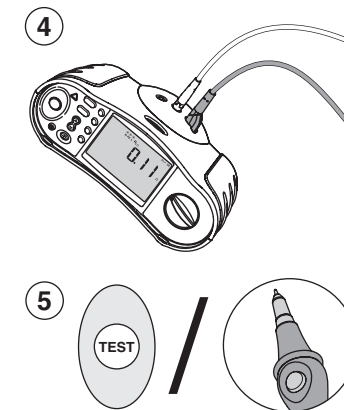
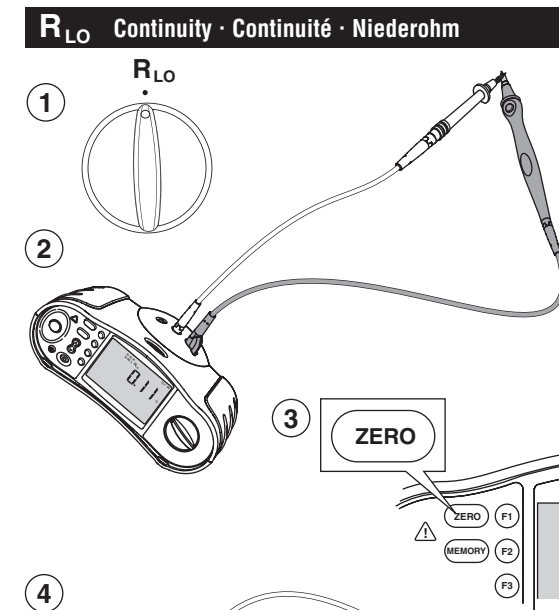
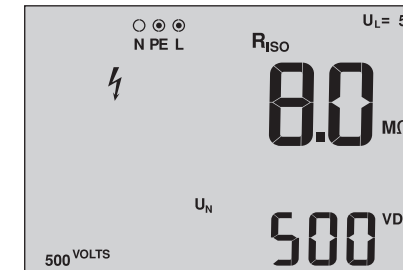
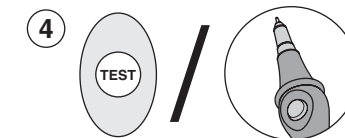
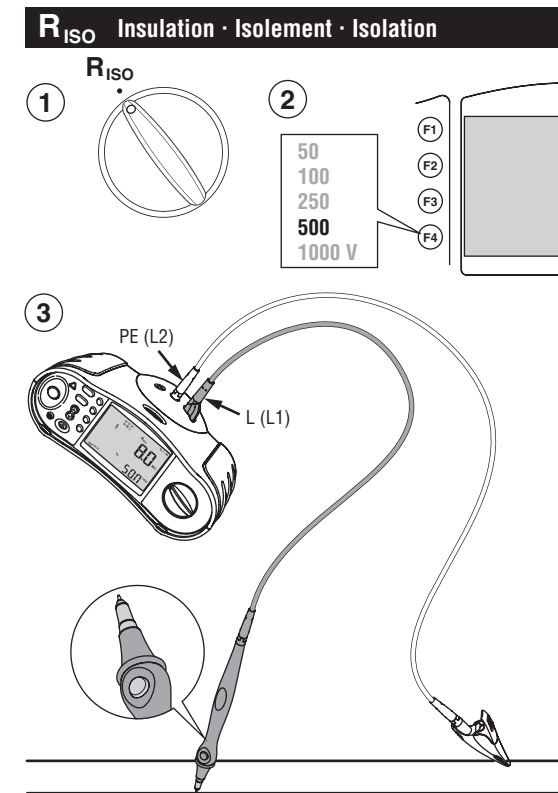
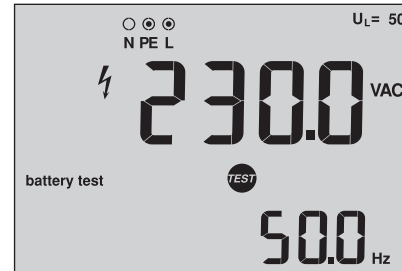
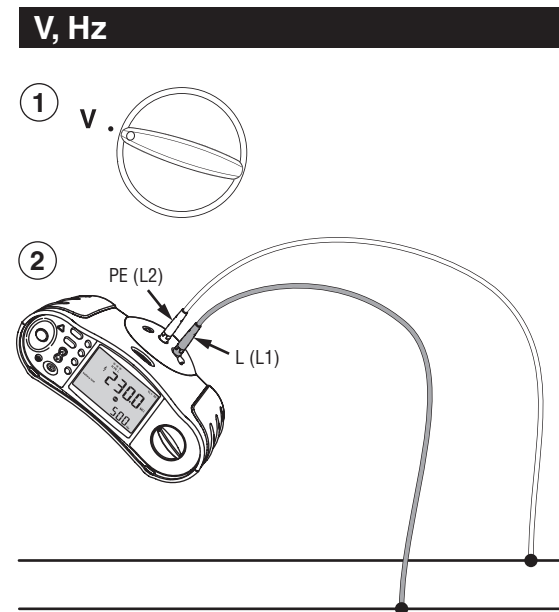
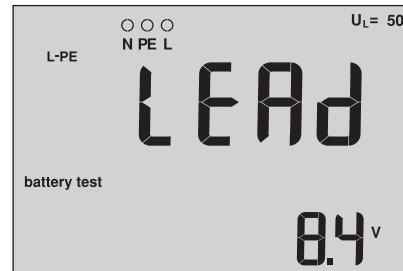



## 165X Quick Reference Guide


### ⚠ ⚠ Warning


- Read the 165X Users Manual before using the tester.
- Lisez le mode d'emploi du 165X avant d'utiliser le testeur.
- Leggere il manuale d'uso del 165X prima di usare il tester.
- Vor dem Gebrauch des Testgeräts das 165X-Bedienungshandbuch lesen.
- Lea el Manual de uso del comprobador 165X antes de utilizarlo.
- Leia o Manual do Usuário 165X antes de usar o testador.
- Lees de 165X gebruiksaanwijzing vóór gebruik van de tester.
- Les bruksanvisningen for 165X før måleinstrumentet tas i bruk.
- Man bør læse brugsanvisningen til modelserie 165X, inden instrumentet tages i brug.
- Lue 165X-käyttöopas ennen tämän testerin käyttöä.
- Läs användarhandboken för 165X innan du använder testinstrumentet.

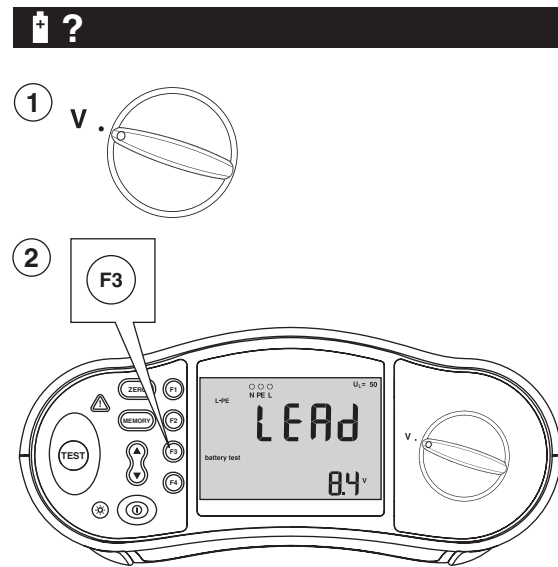



**Z<sub>I</sub>** Loop · Boucle · Schleife

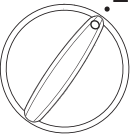
1 

2 


3 ZERO 

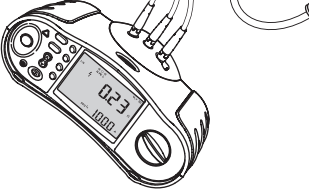
4 

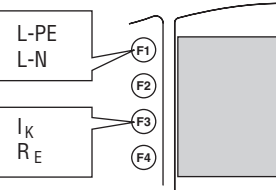
5 

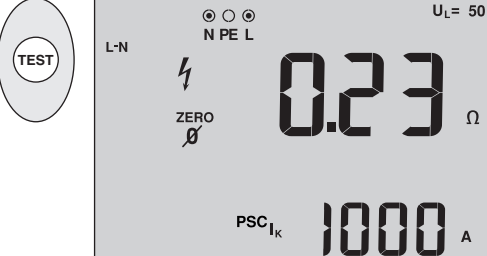
6 

**ΔT / I<sub>ΔN</sub>** RCD · Disjoncteur différentiel · FI


1 

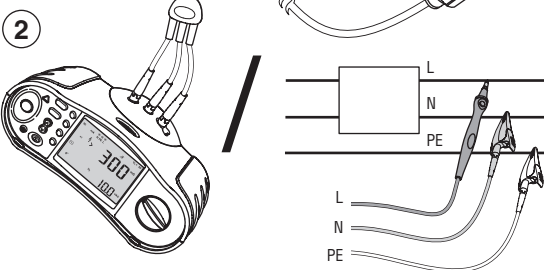
2 

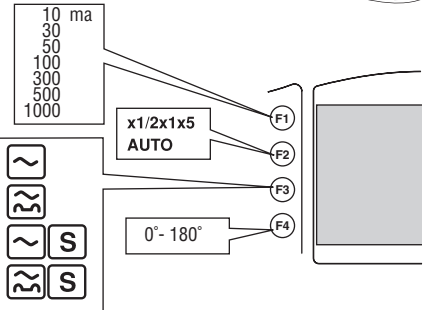
3 

4 


**R<sub>E</sub>** Earth · Terre · Erde


1 

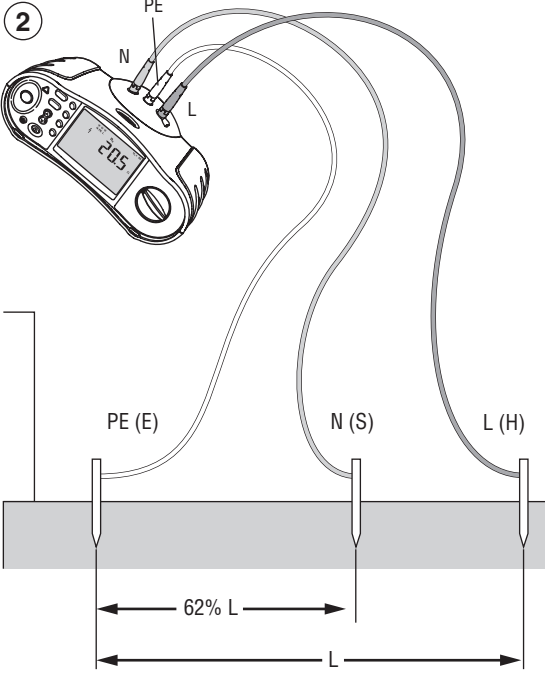
2 


4 


**Phase rotation** · Rotation de phase · Phasenfolge

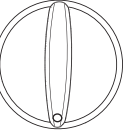1 

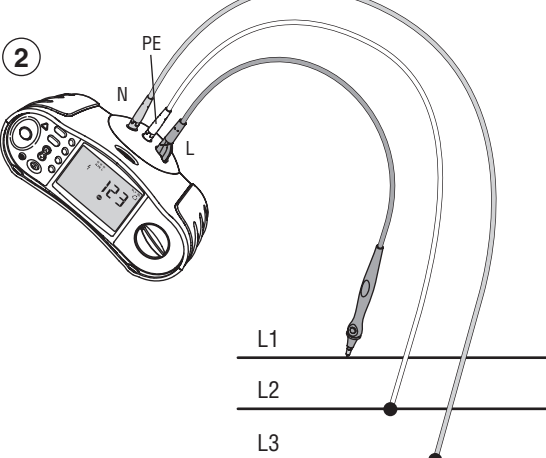2 



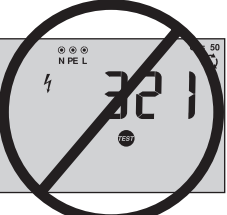

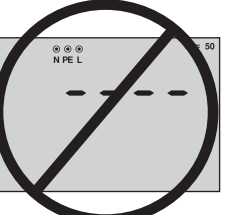

**IR**

