

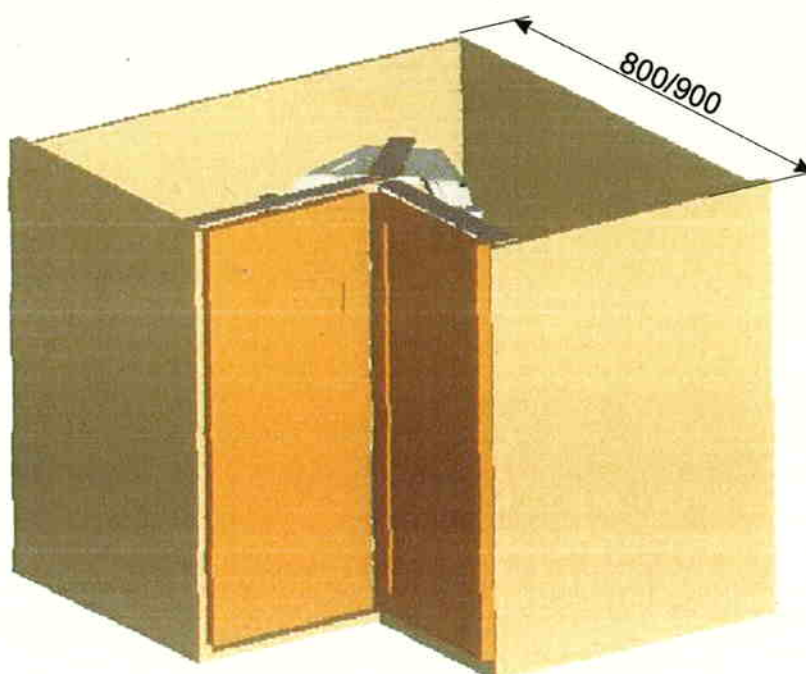


Montageanleitung für den Eckschrankdrehbeschlag REVO 90°




Mounting instruction for
Corner Carousel Fitting
Instructions de montage
pour meubles bas d'angle

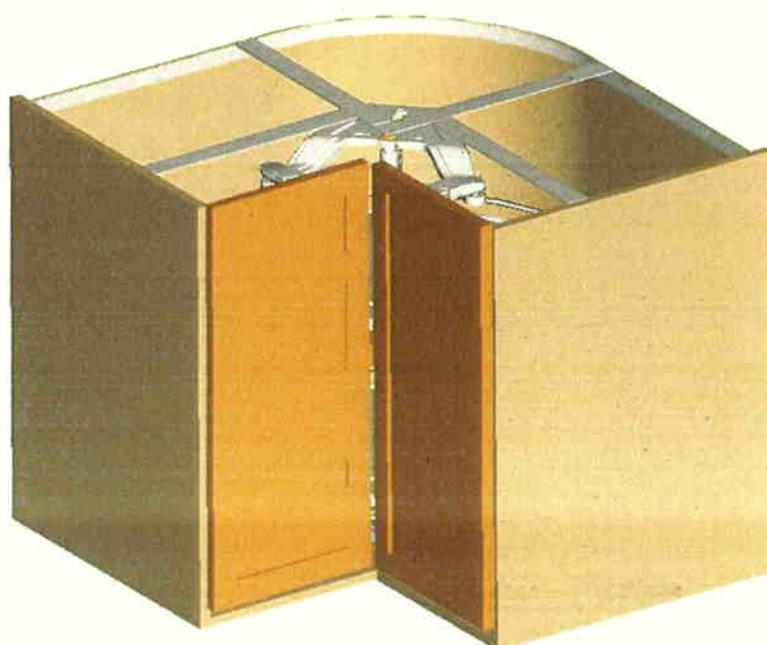


1. 900mm

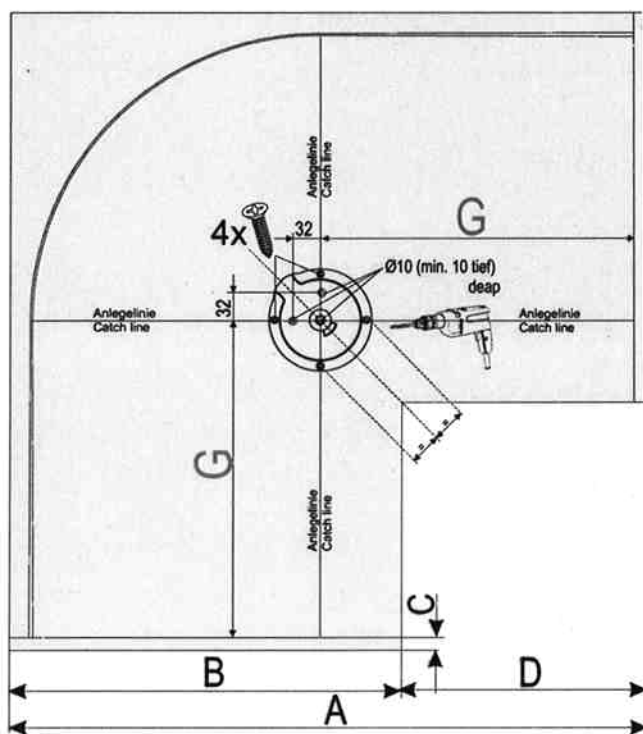

G = A - B - C - Aufschlagpufferdicke + 92,5mm
(door buffer)

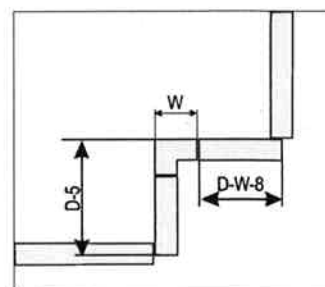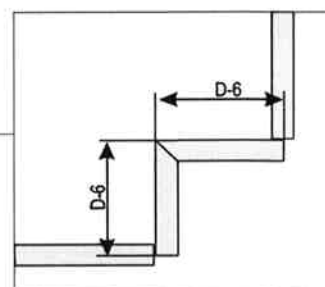
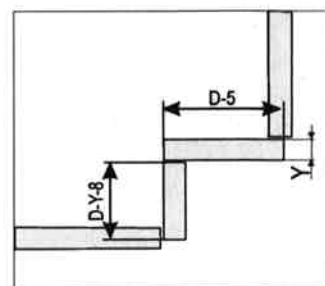


800mm


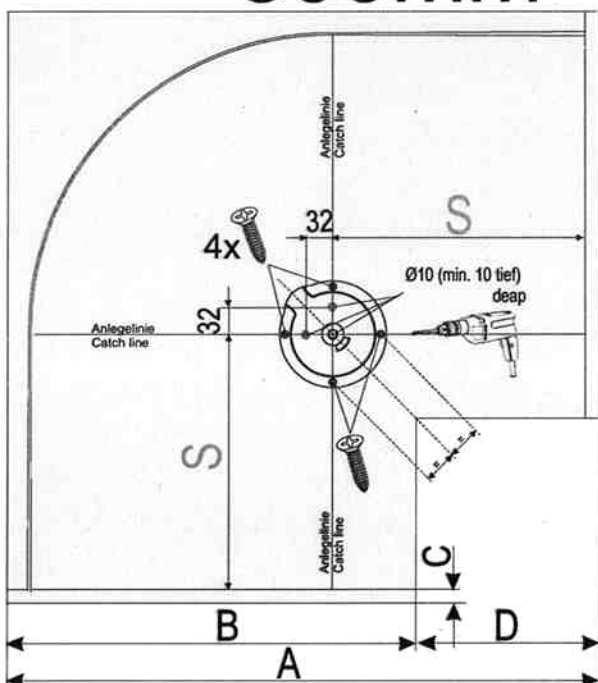


S = A - B - C - Aufschlagpufferdicke + 142,5mm
(door buffer)





2.

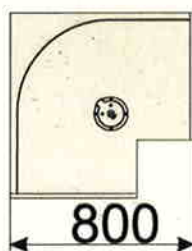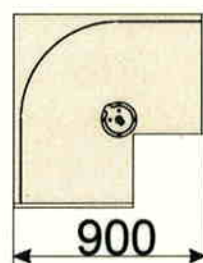



3.

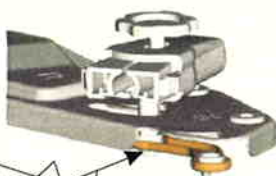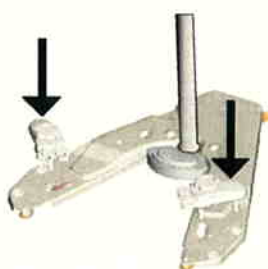



klick

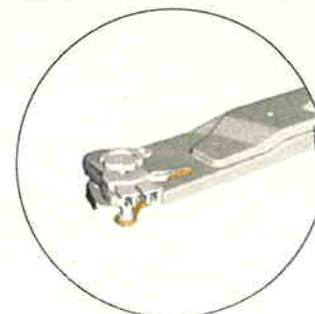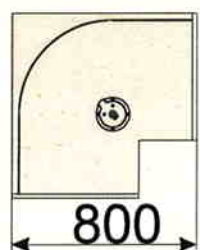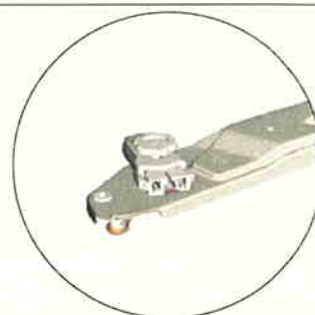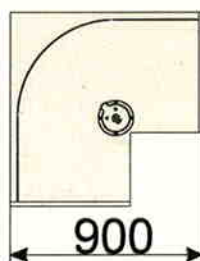






4.

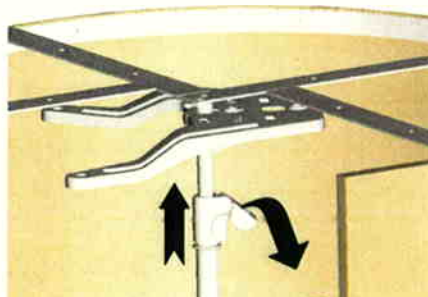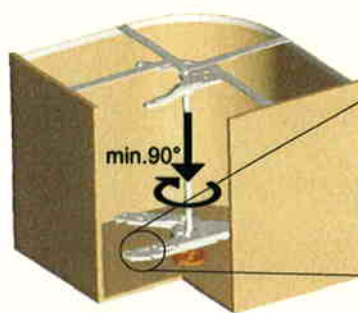


5.

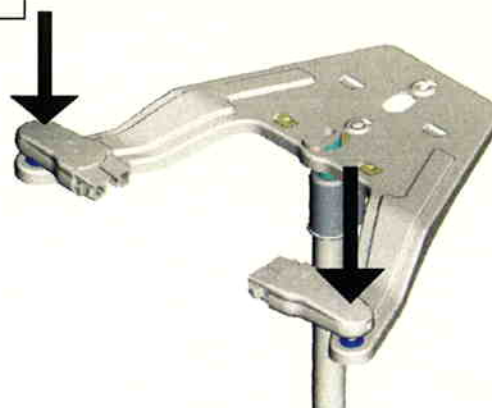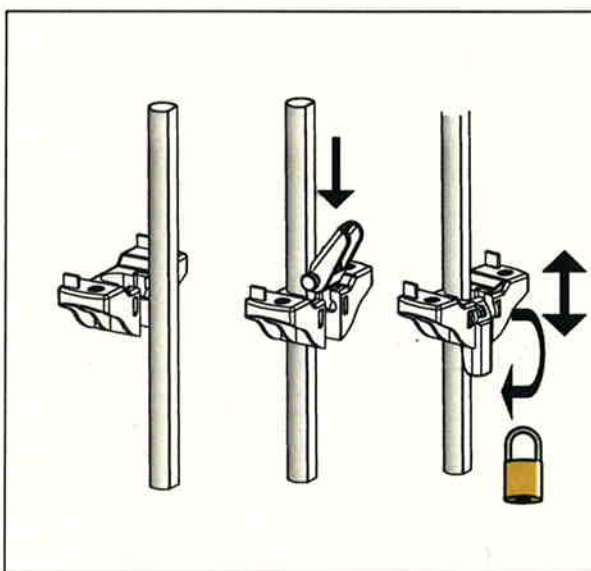

6.

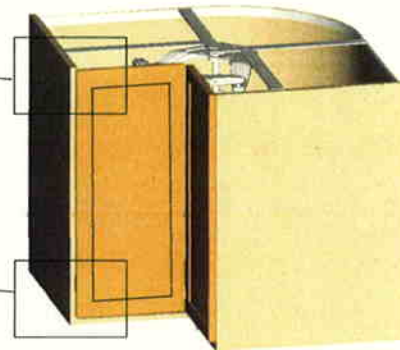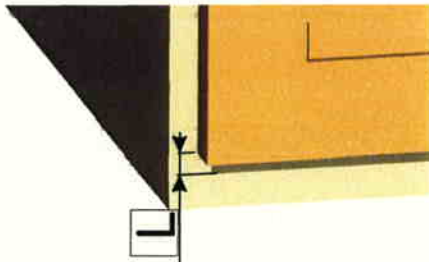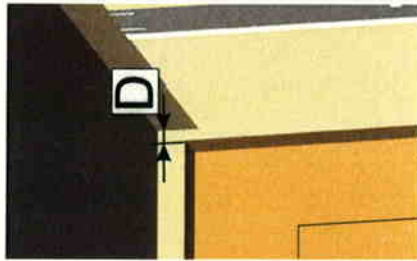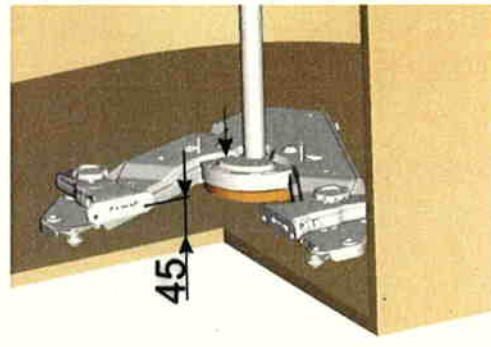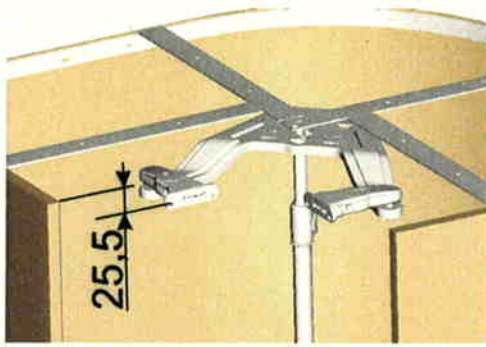

900mm Euro-Schraube
verwenden
use euro screw

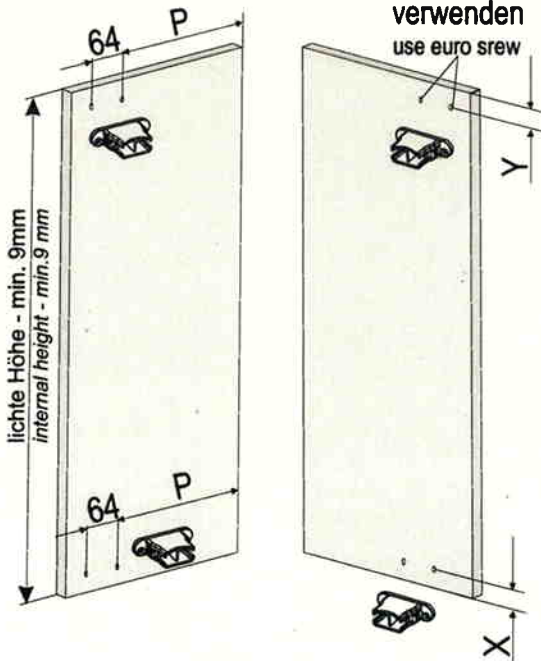


P=**G**-255+Türaufschlag
door overlap

X=45-L L= min 7mm

Y=25,5-D D= min 2mm



800mm Euro-Schraube
verwenden
use euro screw

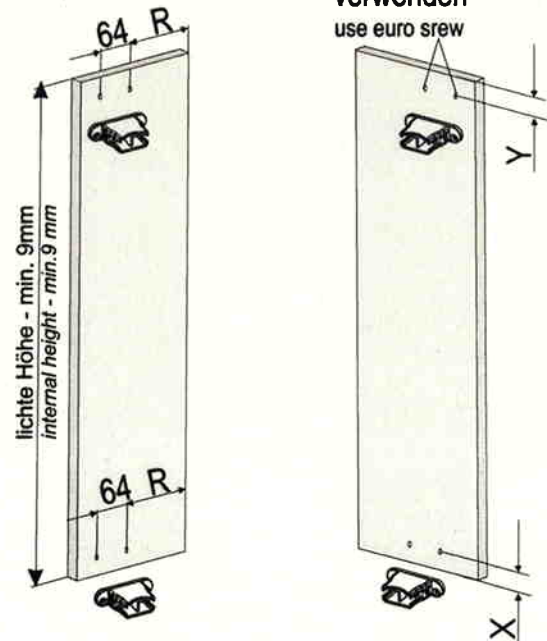






R=**S**-305+Türaufschlag
door overlap

X=45-L L= min 7mm


Y=25,5-D D= min 2mm



Justieranleitung REVO 90° Adjustment instructions Instruction d'ajustage

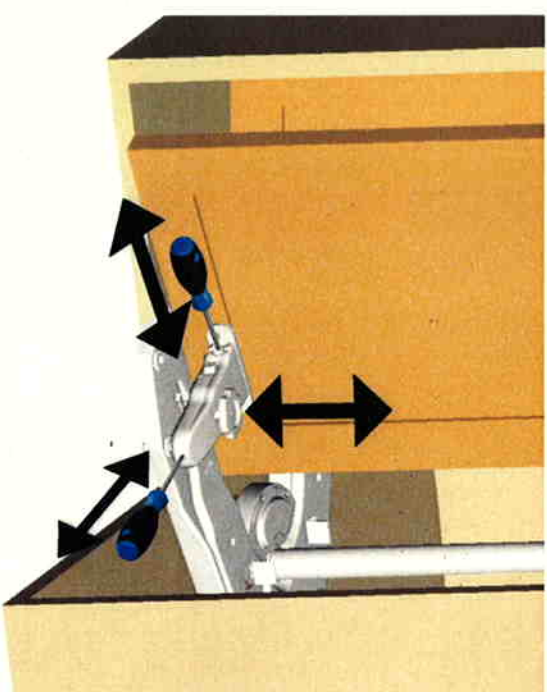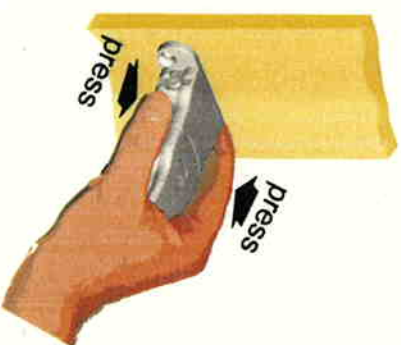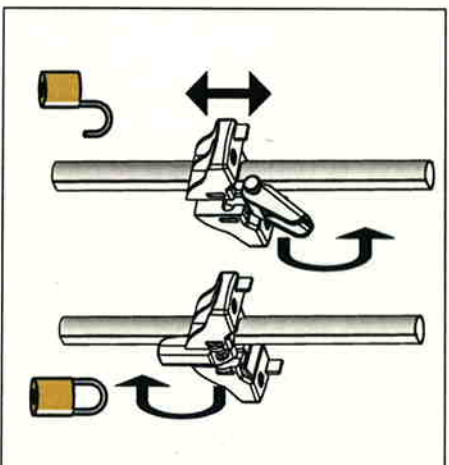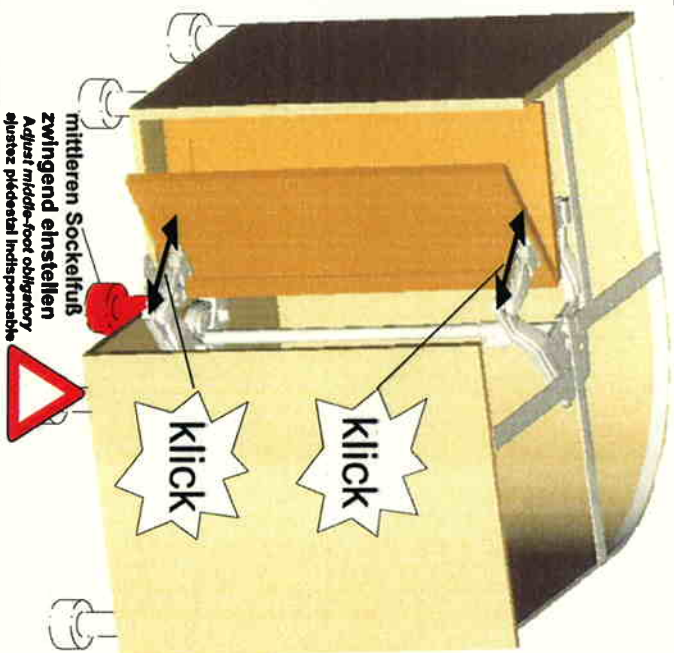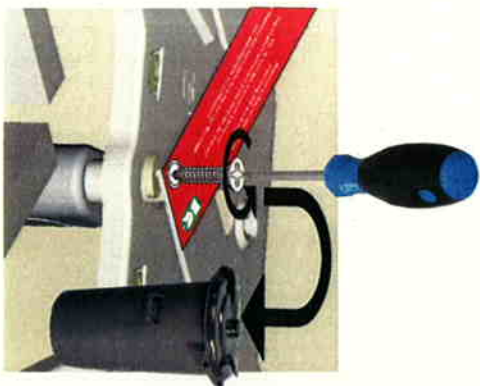


900mm

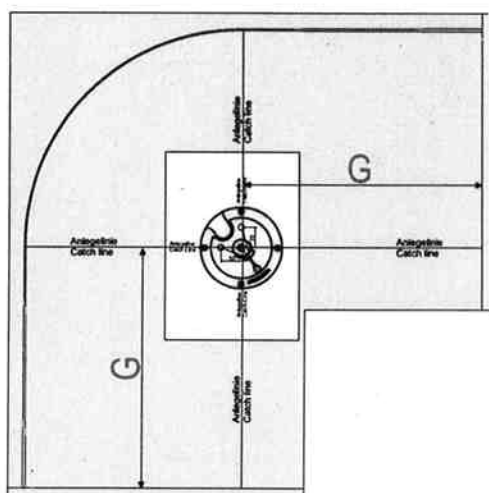


Anlegeline
Catch-Line

Anlegeline
Catch-Line

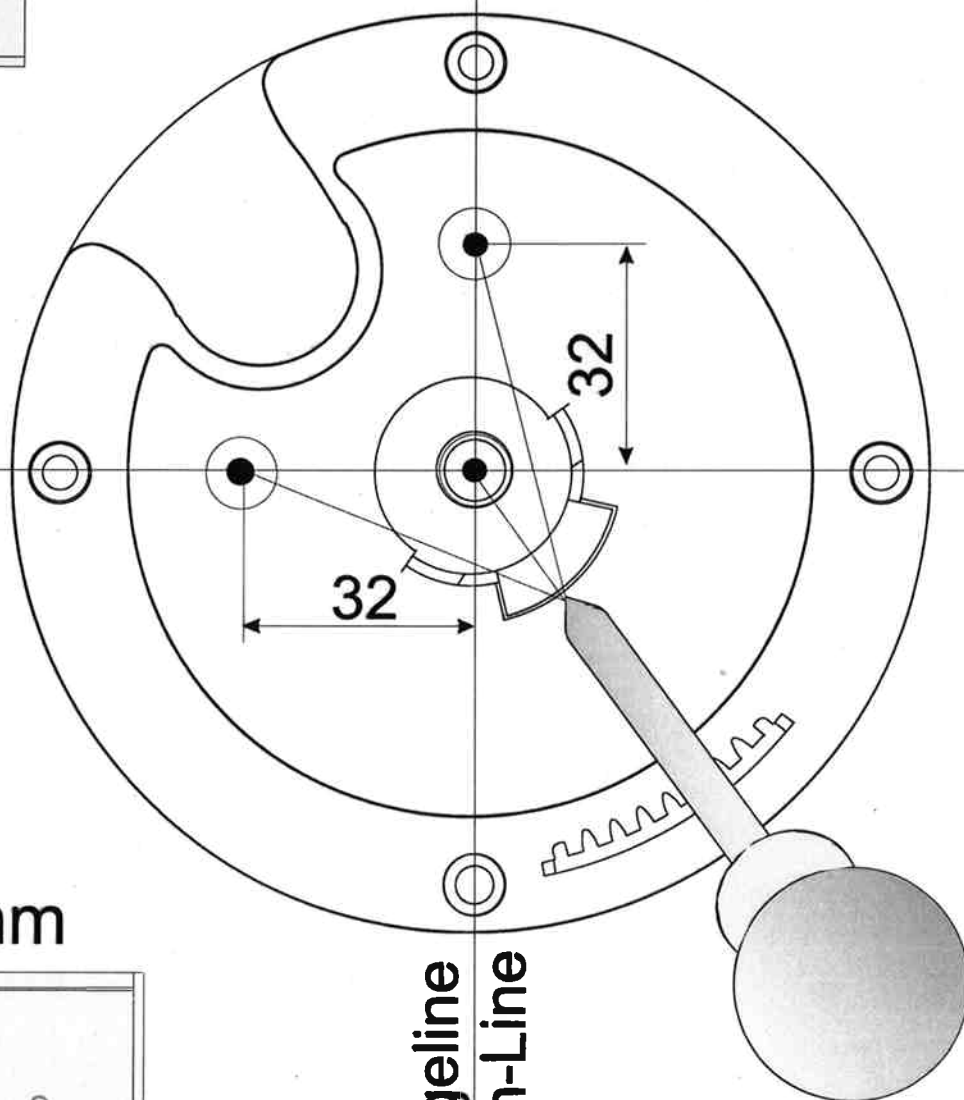


Anlegeline
Catch-Line

800mm

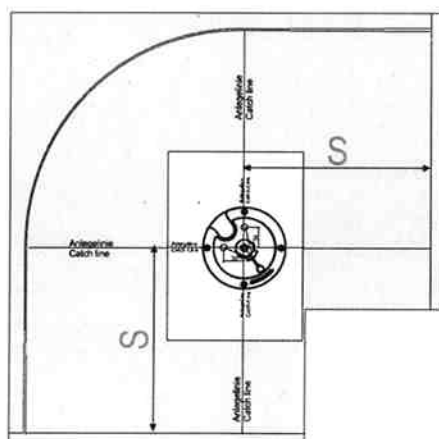

Oberbodenwinkel
Art.Nr. 006943 0009
für REVO 90° und REVO 45°

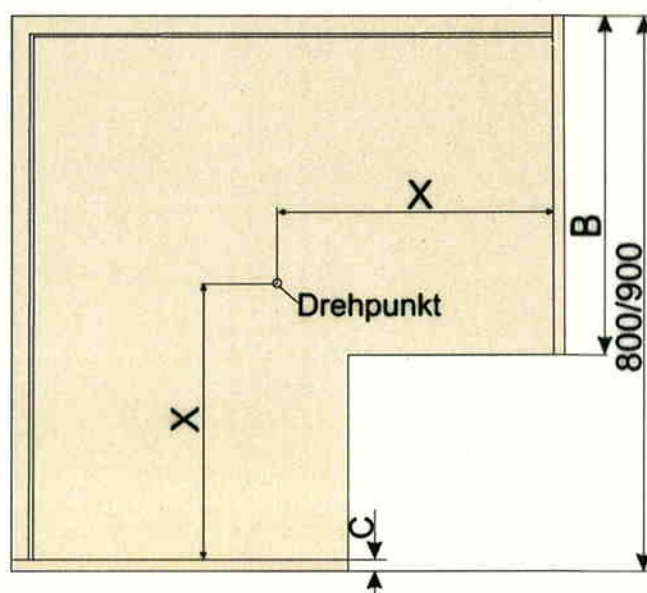

B	545			550			555			560		
C	16	18	19	16	18	19	16	18	19	16	18	19
x 90er	429,5	427,5	426,5	424,5	422,5	421,5	419,5	417,5	416,5	414,5	412,5	411,5
x 80er	379,5	377,5	376,5	374,5	372,5	371,5	369,5	367,5	366,5	364,5	362,5	361,5



90er



Seitenwandtiefe (B)	
560	1
555	2
550	3
545	4

80er



Seitenwandtiefe (B)	
545	1
550	2
555	3
560	4

C = 16 C = 18 C = 19

